


DS1 Installation on ADEC Chair Tubing

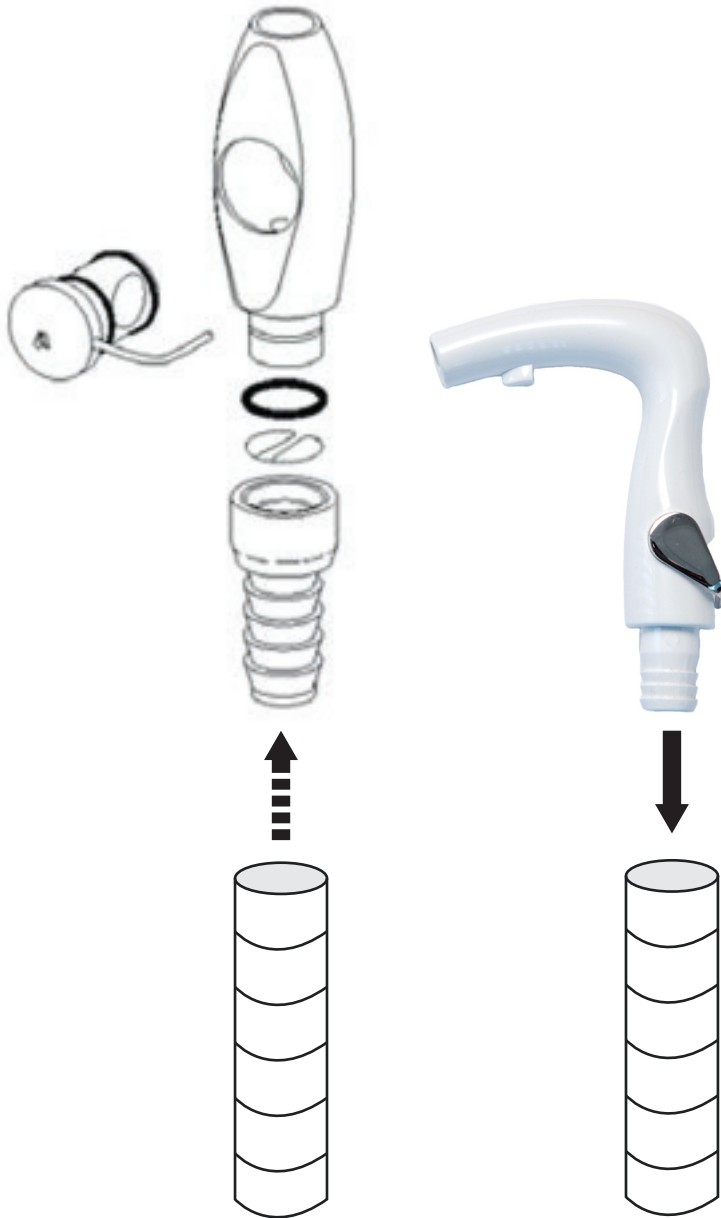

1. Remove the HVE tip, leaving the Clip and Coupler intact



2. Twist off the coupler, using either a clockwise or counter-clockwise motion



3. Once the coupler is removed, twist DS1 down into the hosing